


d-briDGe Quickstart Guide



1




2

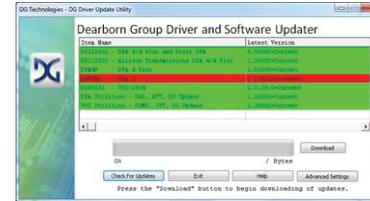

3



5

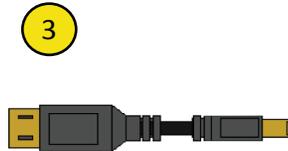

3



4

Instructions:

- 1 Install J2534 compliant PC drivers from the d-briDGe CD.
- 2 After rebooting, you will be prompted to check for updates. Connect to the Internet and press "Continue", then press the "Check for Updates" button. If there are updates (Red), press the "Download" button. DG Update will download and start the installation.
- 3 Using the USB cable, connect the d-briDGe to your PC. Connect the vehicle cable to the d-briDGe.
- 4 Make certain to first connect the vehicle cable to the d-briDGe as stated in 3 above. Finally, connect the other end of the vehicle cable to the vehicle's diagnostic port.
- 5 Configure your J2534 compliant diagnostic application to use the d-briDGe. The "d-briDGe User Manual" contains information for configuring many of the "common" applications. If your application is not covered in the manual, consult the documentation that came with your application on how to configure for J2534 compliant devices.

d-briDGe Accessories



DG-DBRIDGE-CT-CABLE
J1962 to 9-pin Deutsch



DG-15 FT USB CABLE
15' USB CABLE



DG-OBDII-BOX
16 PIN BREAKOUT BOX



PE-20301
Palmer ScanXL STD



PE-20302
Palmer ScanXL PRO




RA-SST-PC
RA CONSULTING SST



PE-20310
Palmer ScanXL GM ENH
GM Enhanced Add-On



PE-20311
Palmer ScanXL FORD ENH
FORD Enhanced Add-On

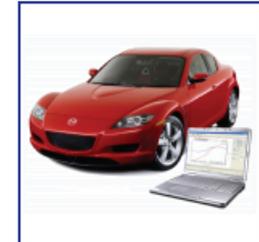

PE-20312
Palmer ScanXL MAZDA ENH
MAZDA Enhanced Add-On